



Multiple Hubs

The basic install instructions (found in the manual) apply to all CURB hub installs however multiple CURB hubs will require the following:

Only the main legs coming into the main panel will need to be monitored with the 100 CT's. These will be the only clamps designated as "Main" in the configuration app for any of the hubs.

Sub panels do not need to have 100 CT's clamped on the mains coming into the panel. Also, the sub panel breaker will not need to be monitored in the main panel.

After the first CURB hub has all clamps assigned, go to the Installation section of the configuration app and click on "Add Panel". You will add second panel information here. Then, you will go back to the Installation section of the configuration app and click on "Add CURB Hub". From here you will be able to complete the clamp assignment for the second CURB hub.

Only one Home Plug is required to create the PLC signal regardless of the # of CURB hubs to be installed. Each CURB hub comes with a Home Plug but only one needs to be used in any install.